



Instruction Manual

Hawaii's Finest Shave-Pro

Model No. 1810, 1810EX









GOLD MEDAL® PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA



SAFETY PRECAUTIONS

	<p style="text-align: center;">⚠ DANGER</p> <p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse any part of this equipment in water. Do NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing.</p> <p style="text-align: right;">008GEND1012</p>
	<p style="text-align: center;">⚠ WARNING</p> <p>Never put your fingers or any object into the shaver body (the goose-neck or hopper) while the motor is running. Serious injury may occur. <i>(Gold Medal Products Company does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.)</i></p> <p style="text-align: right;">017SW1012</p>
	<p style="text-align: center;">⚠ WARNING</p> <p>ALWAYS wear safety glasses when servicing this equipment.</p> <p style="text-align: right;">010GENW1012</p>
	<p style="text-align: center;">⚠ WARNING</p> <p>Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p style="text-align: right;">011GENW1012</p>
	<p style="text-align: center;">⚠ CAUTION</p> <p>Do NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation.</p> <p style="text-align: right;">012GENC1012</p>
	<p style="text-align: center;">⚠ CAUTION</p> <p>This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.</p> <p style="text-align: right;">007GENC1012</p>

NOTE: Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions.



INSTALLATION INSTRUCTIONS

Inspection of Shipment

Unpack all cartons and check thoroughly for any damage that may have occurred during transit. Damage claims should be filed immediately with the transportation company.

Setup


Your new Shave-Pro was completely assembled and tested at the factory. Remove all packing material and tape before starting operation.

Electrical Requirements

The following power supply must be provided:

1810: 120V, 8.1 AMP, 60 Hz

1810EX: 230V, 8.1 AMP, 60 Hz

	⚠ DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death.</p> <p>Do NOT immerse any part of this equipment in water.</p> <p>Do NOT use excessive water when cleaning.</p> <p>Keep cord and plug off the ground and away from moisture.</p> <p>Always unplug the equipment before cleaning or servicing.</p>

Your electrician must furnish sufficient power for proper machine operation. We recommend this shaver be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

Before You Plug In Machine

1. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
2. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
3. **DO NOT** use a grounded to un-grounded receptacle adapter.



OPERATING INSTRUCTIONS

Ice Requirements

The Shave-Pro can take ice cubes or block ice, if you break the block into pieces approximately 2 to 3 inches in size.

NOTE: The ice will not enter the shaving chute if the pieces are too large.

Operation of the Shave-Pro

1. Turn power on to Hopper or Foot Switch.
2. Raise hopper lid.
3. Fill hopper with Ice.
4. Close lid to shave when switch set to hopper.
5. If set to foot switch, step on foot switch to shave.

NOTE: Never allow any foreign or metallic objects around the shaver area of the Shave-Pro. Ice picks, scoops, and debris that may be in the ice often damage blades. Harder ice will result in finer snow, while soft ice will result in coarser snow.

Controls and Their Functions




Item	Part No.	Model(s)	Part Description	Qty.
1	39410	ALL	3 POSITION ROCKER BUTTON	1
2	12182	ALL	RESET SWITCH	1
3	39999	ALL	FOOT SWITCH AIR OPENER	1



CARE AND CLEANING

1. Unplug the machine and clean it after use.
2. Make sure to clean the entire machine in order to sanitize them before each use.
3. Clean the outside of the unit with a soft cloth, soap and warm water.
4. **DO NOT** immerse the machine in water.

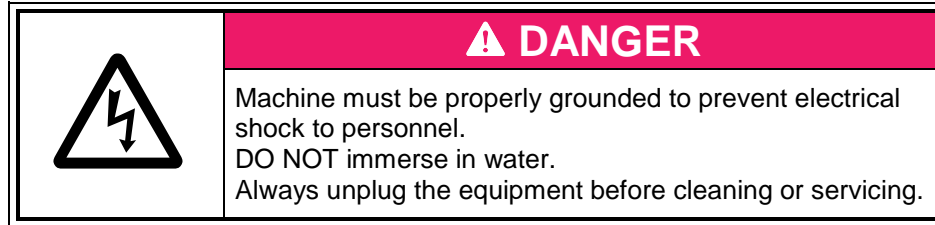


Good sanitation practice demands that all food cooking equipment be cleaned regularly. A clean looking, well-kept machine is one of the best ways of advertising your product.

INSTALLING A NEW SHAVER BLADE


Inspect your equipment before replacing the blade. With the POWER switch OFF, use a flashlight to examine the blade in the shaver body. If the blade appears to be nicked or bent, then the blade should be replaced.

Follow This Procedure

1. Unplug the main power supply cord from the electrical outlet.
2. Remove the 4 screws holding the top cover on the unit. Slide the cover out of the way as shown below.

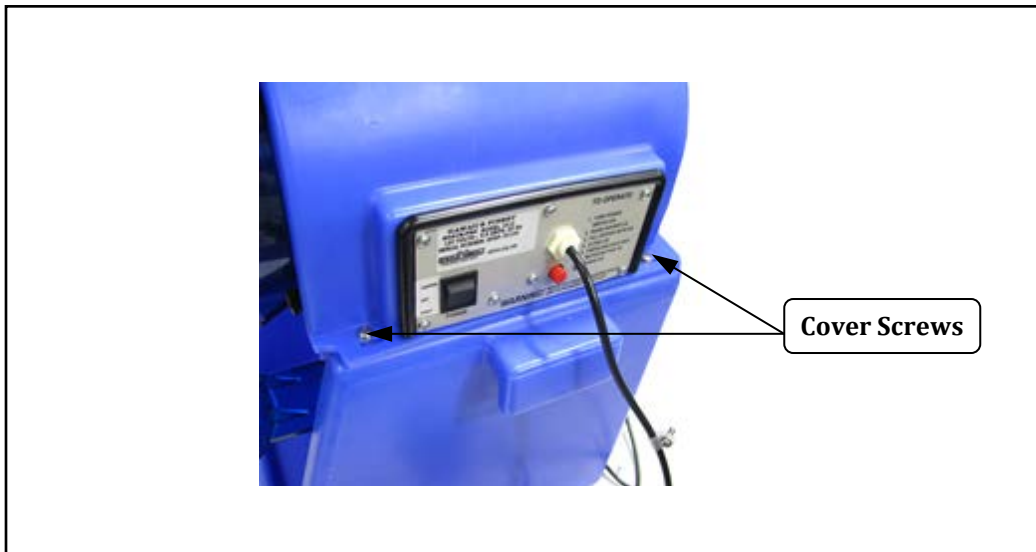


3. Uncouple the quick connect on the electrical lead going to the magnetic switch.
4. Remove the 4 black thumb screws holding on the hopper to the motor plate.

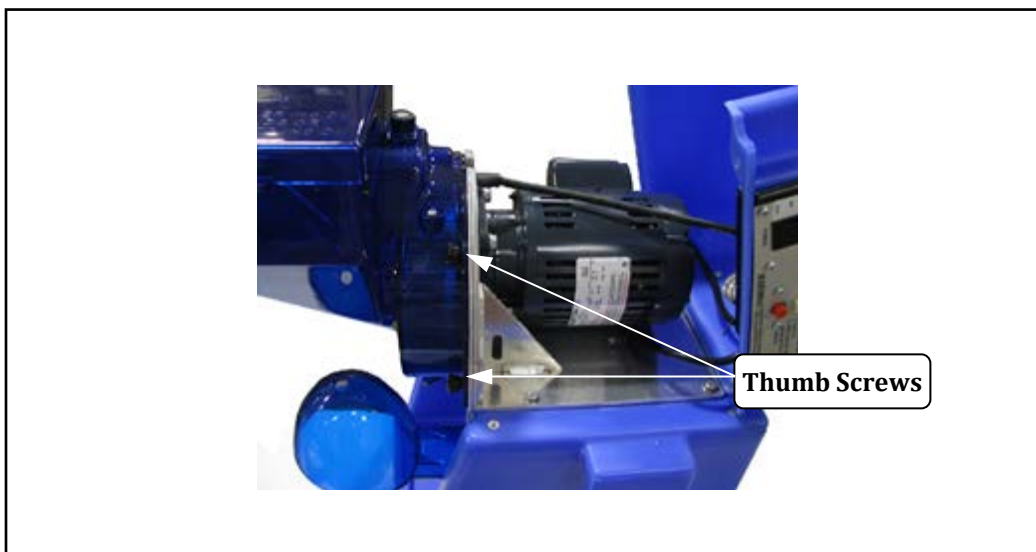


Installing a New Shaver Blade

5. Remove the Hopper Assembly from the Cabinet.
6. The Shaver band blade has 6 tabs on the exterior of the hopper. Twist the tabs to align with the slots in the hopper. Once all 6 are aligned with the slot openings, rotate clockwise, and then push the tabs thru the slots removing the blade.

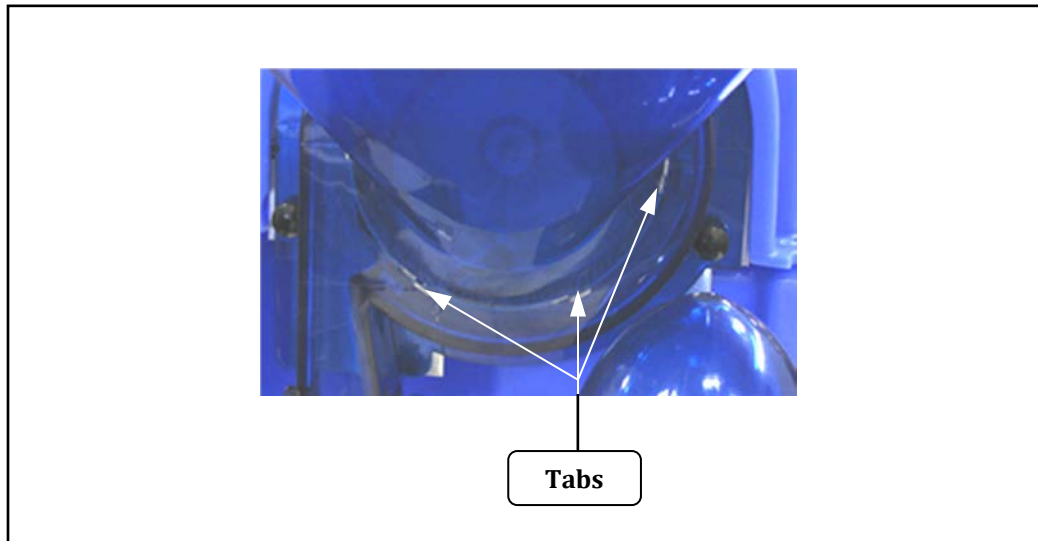

7. Re-installing new band blade. Push the 6 band blade tabs into the slots. Make sure band blade rests in the bottom groove in the hopper and sits flush on the bottom of the groove. You may need to flex the blade to set flush.
8. Now tap and rotate the 6 tabs counterclockwise to lock the band blade in place, slightly twist the tabs.

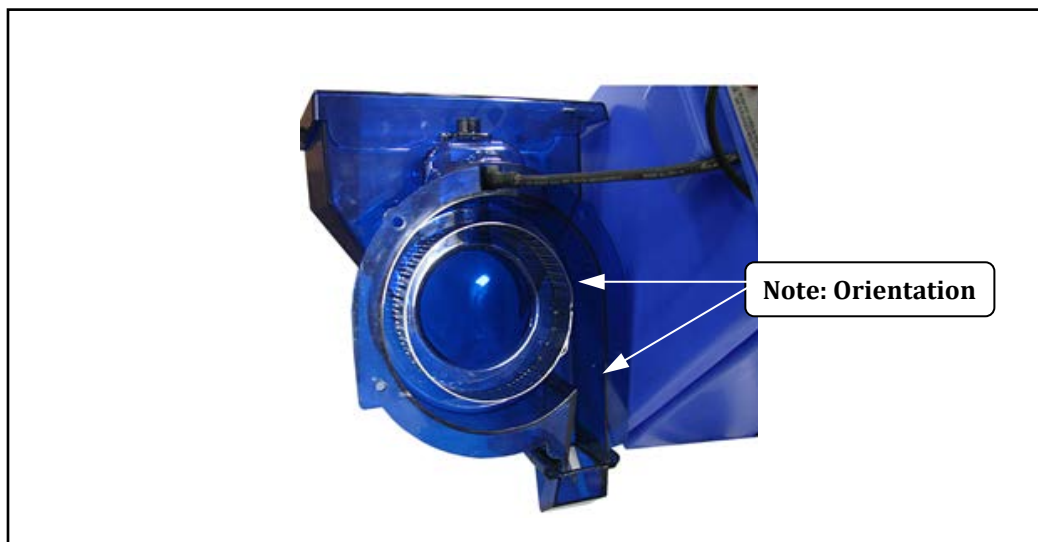




Installing a New Shaver Blade


9. Re-Install the hopper onto the cabinet.
10. Re-Install the 4 thumb screws.
11. Reconnect the electrical quick connect.
12. Reinstall the 4 screws in the top cover.



MAINTENANCE INSTRUCTIONS

	⚠ DANGER
	Do NOT immerse the equipment in water. Unplug your machine before servicing.

	⚠ WARNING
	Adequate eye protection must be used when servicing this equipment to prevent eye injury.

	⚠ CAUTION
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.



ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model number, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:

Phone: (800) 543-0862
(513) 769-7676


Fax: (800) 542-1496
(513) 769-8500

E-mail: info@gmpopcorn.com

Web Page: www.gmpopcorn.com




Shave-Pro Breakdown

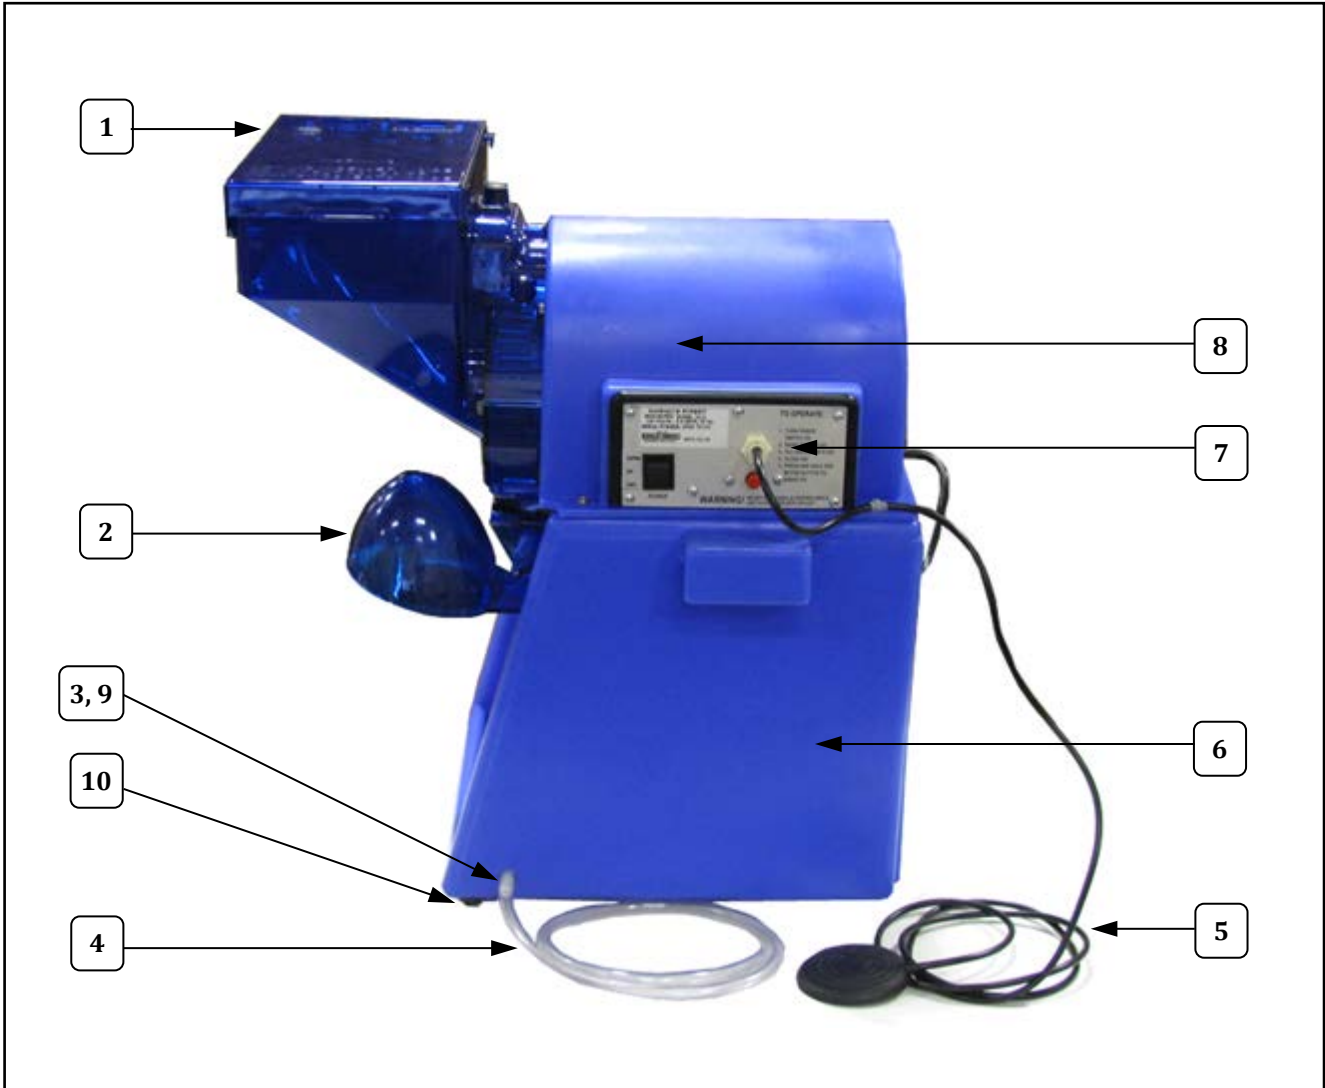

Item	Part No.	Model(s)	Part Description	Qty.
1	12762	ALL	HOPPER COMP WITH NOZ 1810	1
2	12749	ALL	DOME ICE FORMER BLUE TINT	1
3	12668	ALL	DRAIN FITTING	1
4	22034	ALL	DRAIN HOSE 3/8 ID 1/16 W	3'
5	39998	ALL	HOSE AND FOOT BELLOW	1
6	12745	ALL	BASE CABINET SHAVE PRO	1
7	22710	ALL	ELECTRICAL BOX COVER	1
8	12747	ALL	MOTOR COVER	1
9	41163	ALL	HOSE CLAMP WITH SCREW	1
10	87247	ALL	RUBBER BUMPER FOOT	4




Shave-Pro Breakdown

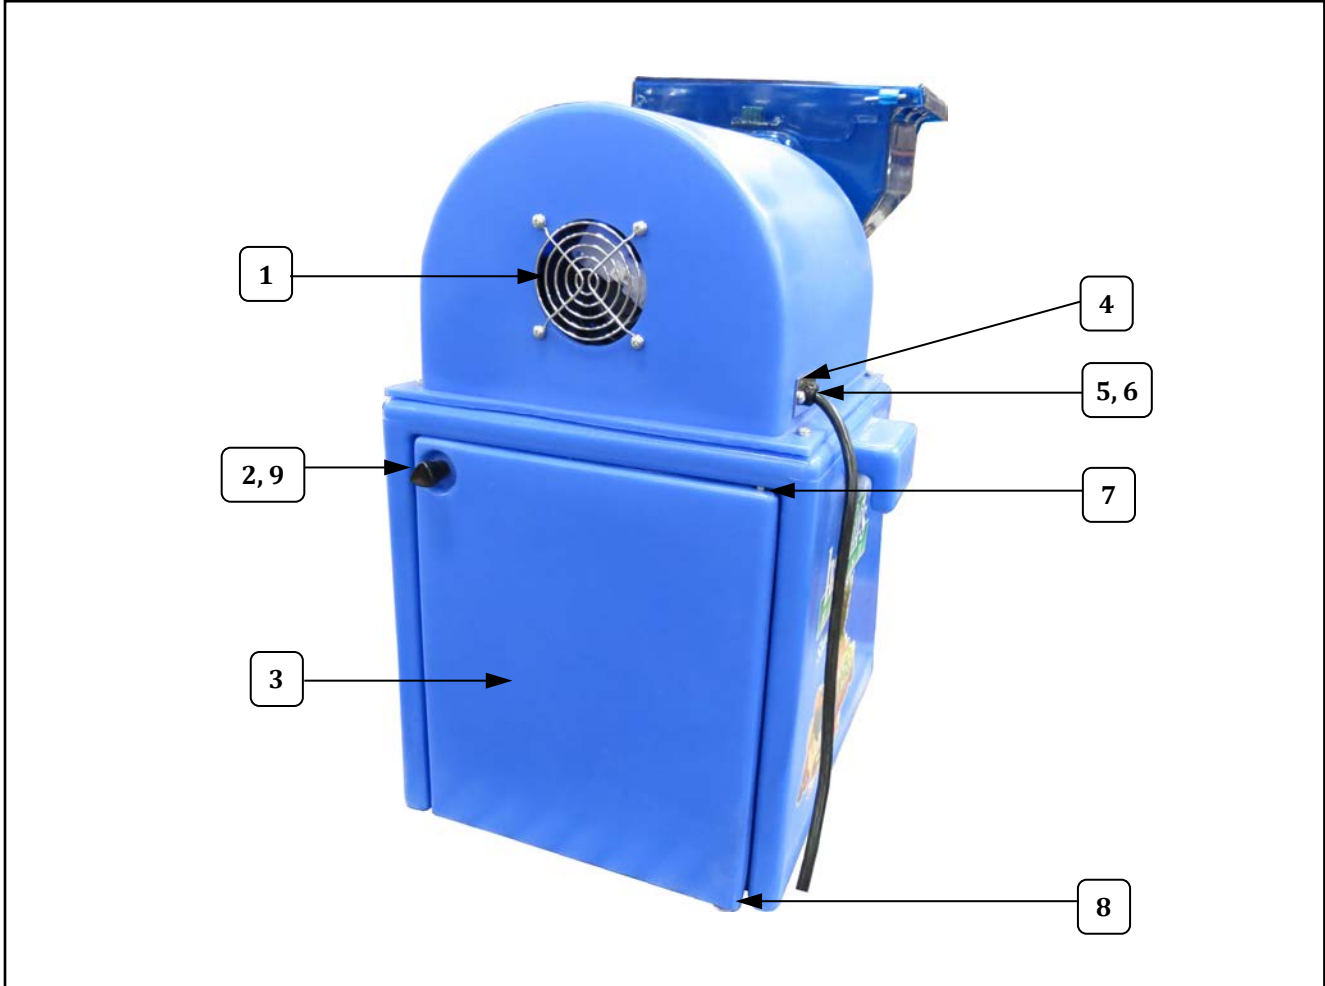

Item	Part No.	Model(s)	Part Description	Qty.
1	74746	ALL	3IN FAN GRATE	1
2	47120	ALL	KNOB LID LEFT	1
3	12748	ALL	DOOR SHAVE PRO	1
4	12673	ALL	PLATE, POWER CORD	1
5	76026	ALL	STRAIN RELIEF	1
6	22038	1810	LEAD-IN CORD 15 AMP PLUG	1
	42369	1810EX	EXPORT POWER SUPPLY CORD	
7	12752	ALL	DOOR PIN (not shown)	1
8	12746	ALL	BRACKET DOOR MOUNTING	1
9	55104	ALL	LATCH CATCH (not shown)	1



Shave-Pro Breakdown

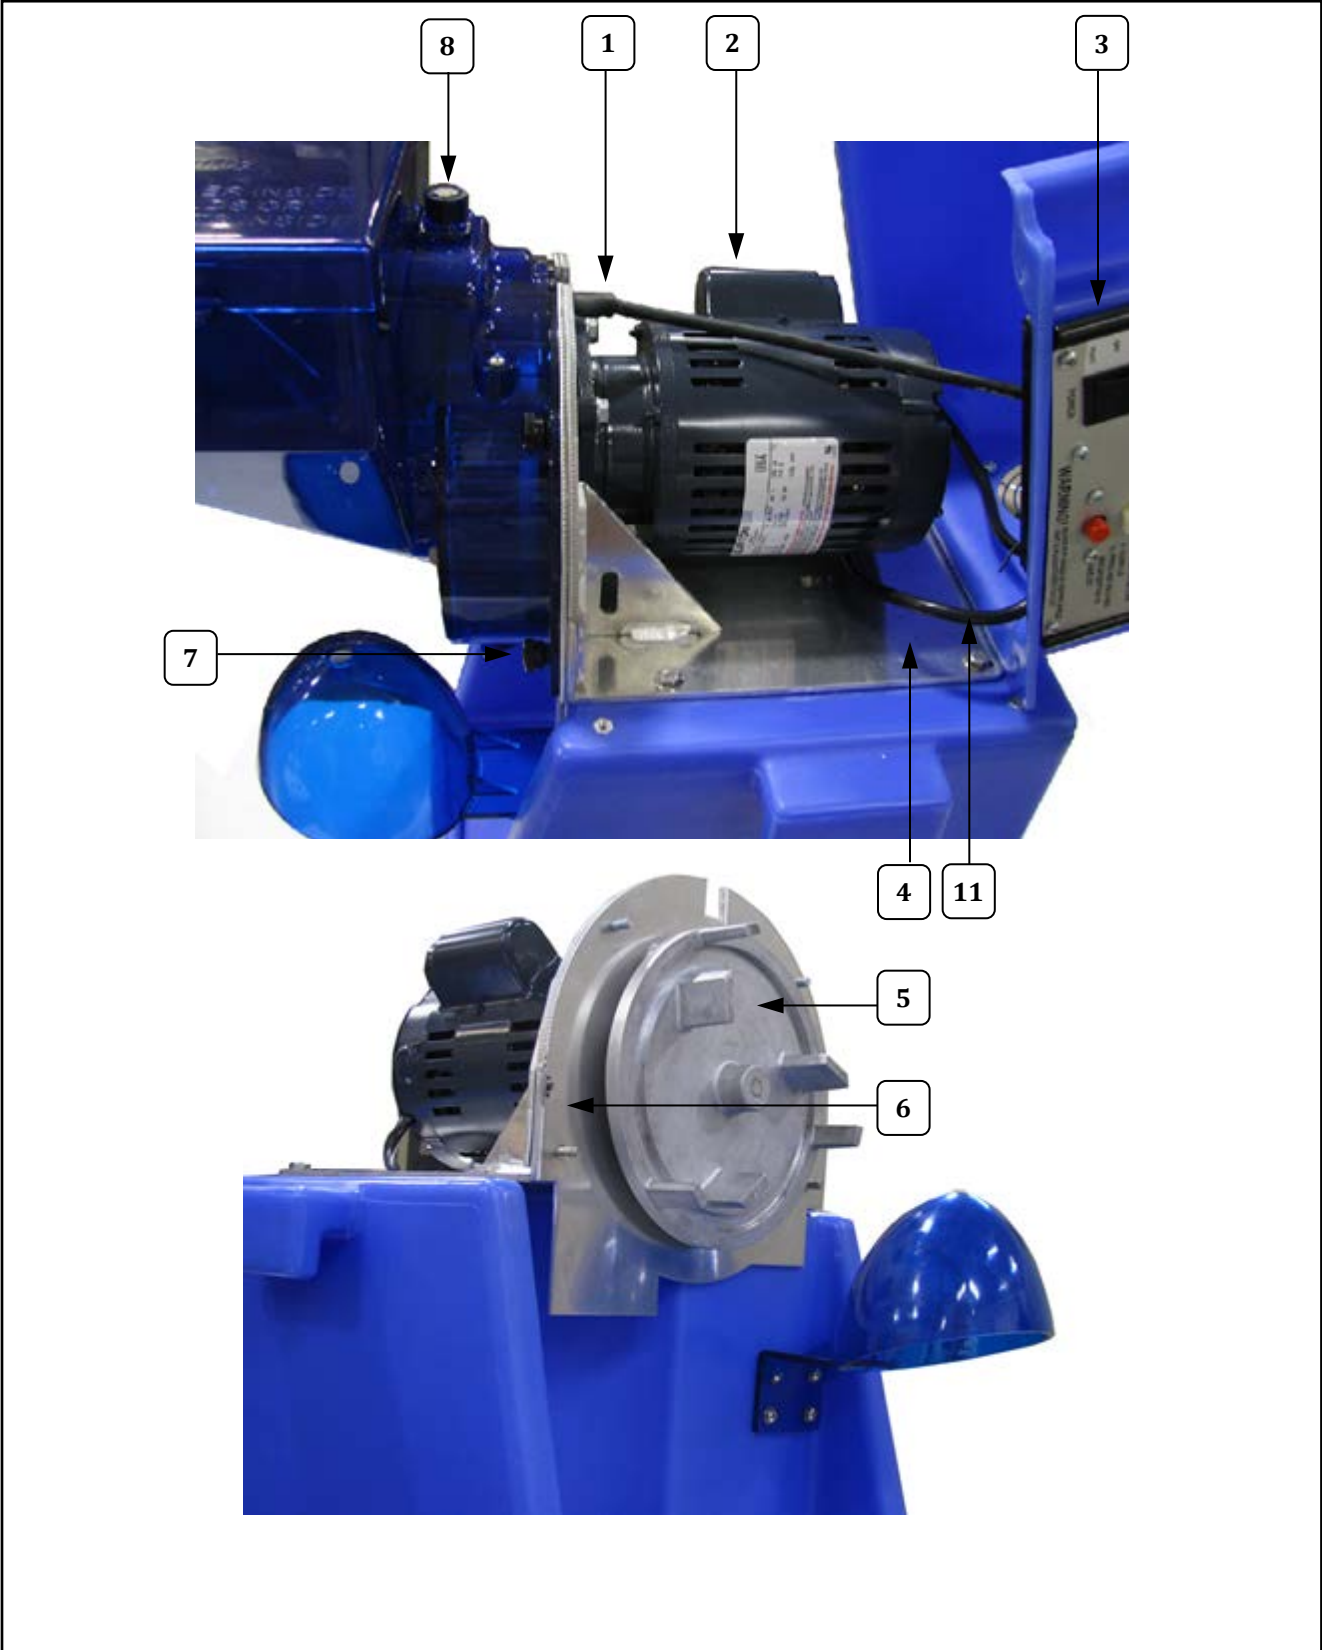




Shave-Pro Breakdown

Item	Part No.	Model(s)	Part Description	Qty.
1	12131S	ALL	HARNES DOOR SAFETY SW	1
2	12790	1810	MOTOR 1/3 HP	1
	12790EX	1810EX	MOTOR 1/3 HP 230V	
3	22704	ALL	ELEC BOX UNIVERSAL	1
4	12743	ALL	MOTOR PLATE WELD ASSY	1
5	22040	ALL	IMPELLER BAND SHAVER	1
6	12733	ALL	ICE SHIELD PLATE	1
7	12793	ALL	KNOB BLACK 1/4-20	4
8	12078	ALL	1/2 OD x 1/2 T MAGNET	2
9	27563	ALL	WRENCH 1/2 OPEN IMP-MOTOR (not shown)	1
10	1088	ALL	PLASTIC SNO DIPPER (not shown)	1
11	12694	ALL	CORD ASSEMBLY	1

Shave-Pro Breakdown

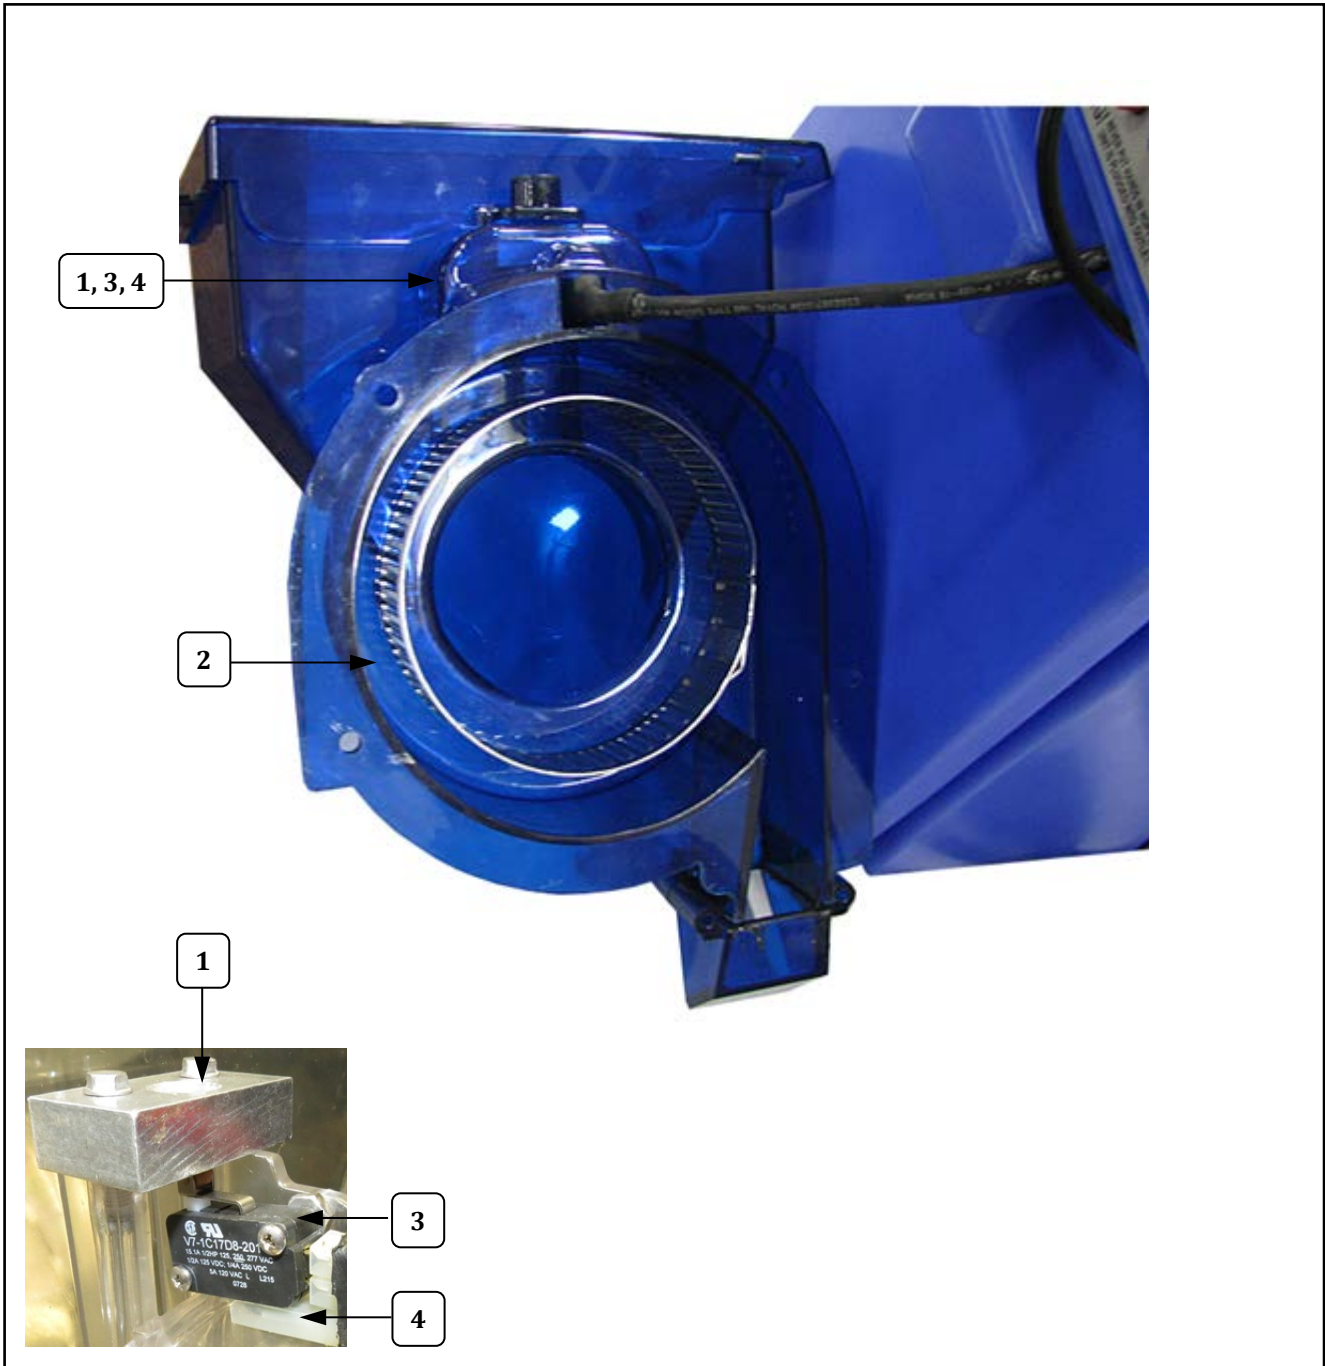


Item	Part No.	Model(s)	Part Description	Qty.
1	12736	ALL	MOUNTING BLOCK MAGNET	1
2	12728	ALL	SHAVER BAND BLADE	1
3	12116	ALL	DOOR SAFTEY SWITCH	1
4	12151	ALL	DOOR DAFTEY SWITCH SPACER	1



WIRING DIAGRAM

Model No. 1810EX

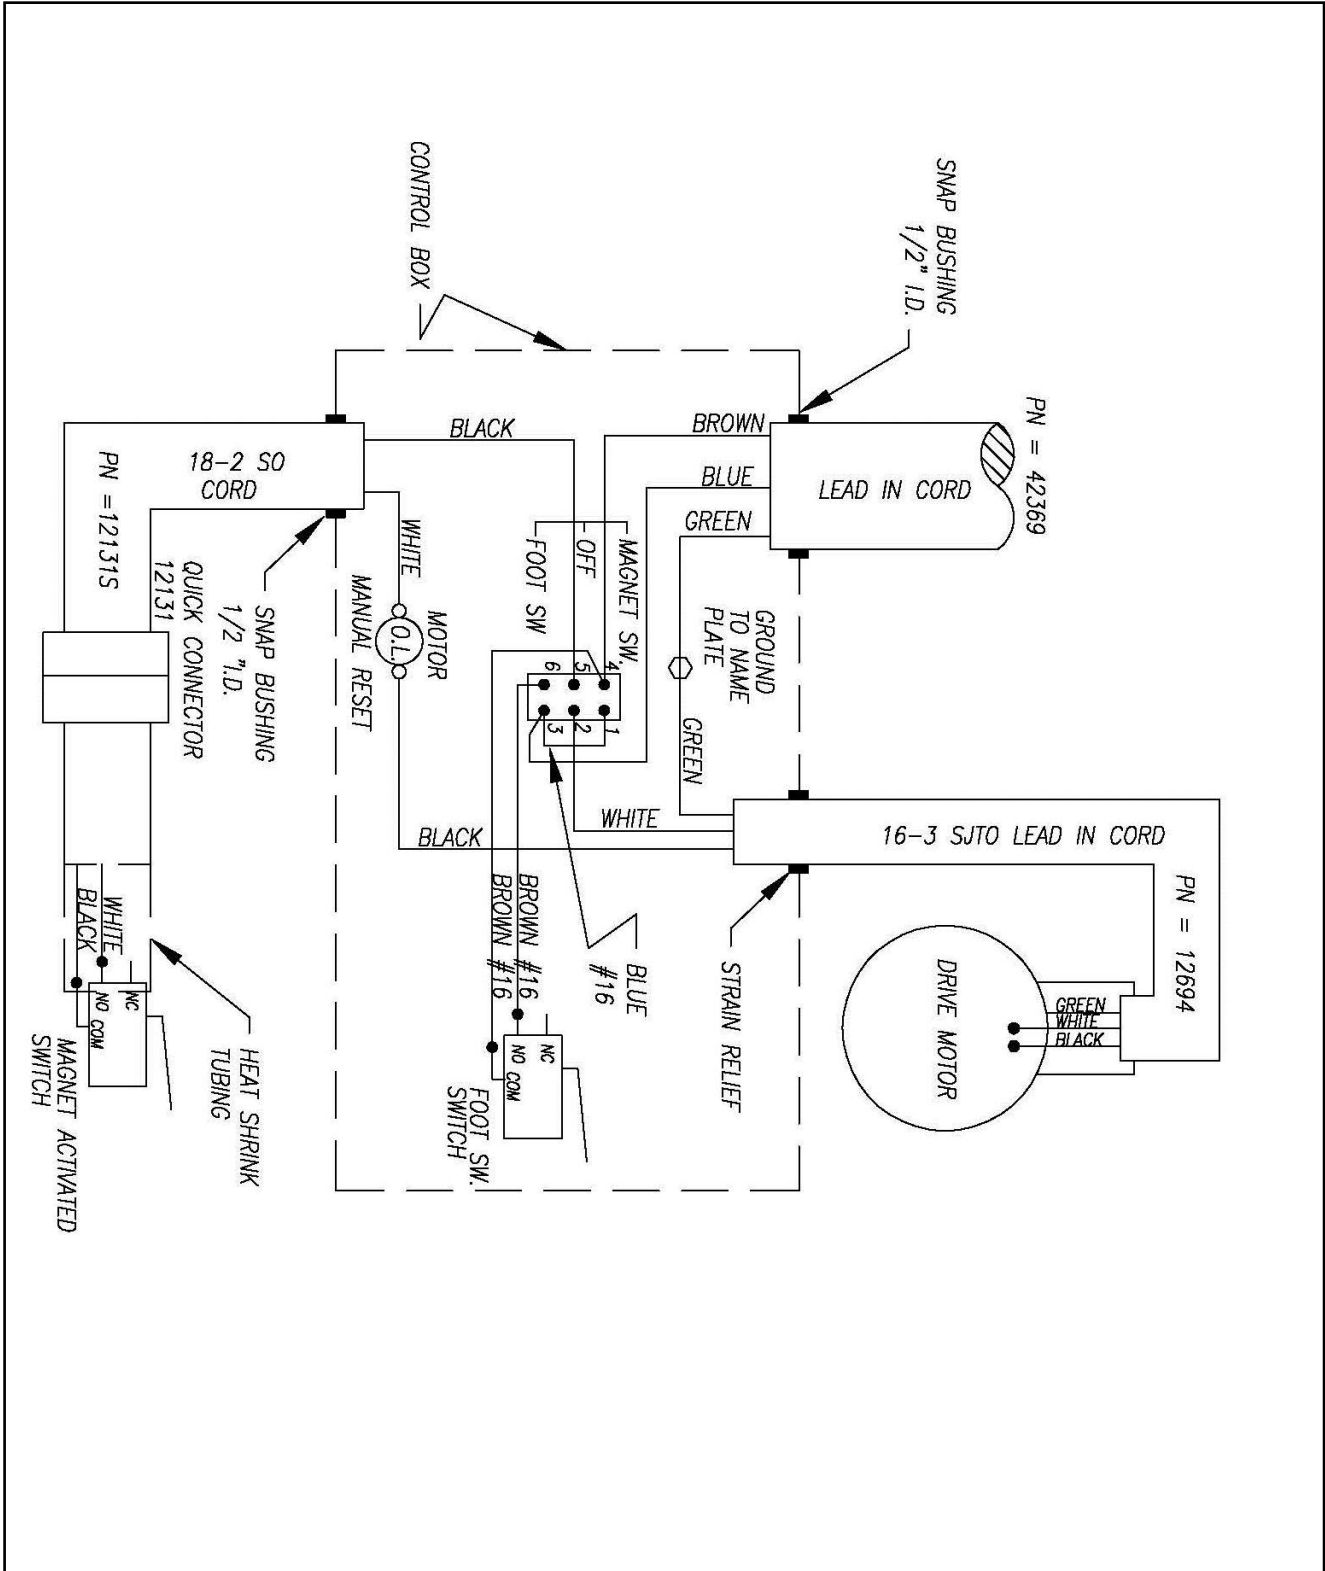



WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL® PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: (800) 543-0862

(513) 769-7676

Fax: (800) 542-1496

(513) 769-8500