

Part No. 22136
September 2009

Simply Sno

Instruction Manual

Model #1813





 **GOLD MEDAL**®


FUNFOOD EQUIPMENT & SUPPLIES


Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

	▲ WARNING
	<p>Never put your fingers or any object into the shaver body (the goose-neck) while the motor is running. Serious injury may occur. <i>(Gold Medal Products does not assume any liability for injury due to careless handling and/or reckless operation of this equipment).</i></p>

	▲ WARNING
	<p>Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment.</p>

	▲ CAUTION
	<p>Carefully read all installation and operating instructions before operating the equipment.</p>

	▲ CAUTION
	<p>This machine is NOT to be operated by minors. Minors are classified as anyone under the age 18.</p>

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION

MACHINE DESCRIPTION

The Simply Sno Shaver is a manual ice shaver. The Shaver consists of the hopper, which houses the band shaving blade, impeller, hopper lid, counterweight, and the base cabinet.

ICE REQUIREMENTS

The Simply Sno Shaver can take ice cubes small or medium in size if you break the block into pieces approximately 2 to 3 inches in size.

NOTE: The ice will not enter the shaving chute if the pieces are too large.

MACHINE OPERATION

TO OPERATE THE SNO-PRO

1. Raise hopper lid.
2. Fill hopper with Ice.
3. Close lid
4. Rotate handle to shave ice


NOTE:

Never allow any foreign or metallic objects around the shaver area of the Manual Ice Shaver. Ice picks, scoops, and debris that may be in the ice often damage blades.

Harder ice will result in finer snow, while soft ice will result in coarser snow.

MAINTENANCE INSTRUCTIONS

	⚠ WARNING
	Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.

	⚠ CAUTION
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include the machine's model name, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807
(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500

or, place orders online:
E-mail: info@gmpopcorn.com
Web Page: www.gmpopcorn.com


INSTALLING NEW SHAVER BLADES

Inspect your equipment before replacing the blades. Use a flashlight to examine the blades in the shaver body. If the blades appear to be nicked or bent, then the blades should be replaced.

Follow this procedure:

1. Remove the 4 top cover pan bolts.
2. Place upper assembly on corner of table.
3. Remove 4 bolts that are attached to the hopper.
4. Remove hopper.
5. The Shaver band blade has 6 tabs on the exterior of the hopper. Twist the tabs to align with the slots in the hopper. Once all 6 are aligned with the slot openings, rotate clockwise, then push the tabs thru the slots removing the blade.
6. Re-installing new band blade, Note: the orientation of the snow guide, to the snow nozzle. Make sure blade is properly orientated. Push the 6 band blade tabs into the slots. Make sure band blade rests in the bottom groove in the hopper, and seats flush on the bottom of the groove. You may need to flex the blade to seat flush.
7. Now tap and rotate the 6 tabs counterclockwise to lock the band blade in place, slightly twist the tabs.
8. Re-Install the hopper onto upper assembly by reinstalling the 4 hopper attachment bolts.
9. Place upper assembly back onto top cover pan, placing hopper into cutout.
10. Re-install top cover pan bolts.
11. Reinstall the 4 bolts in the top cover.

MODEL 1813 ASSEMBLY

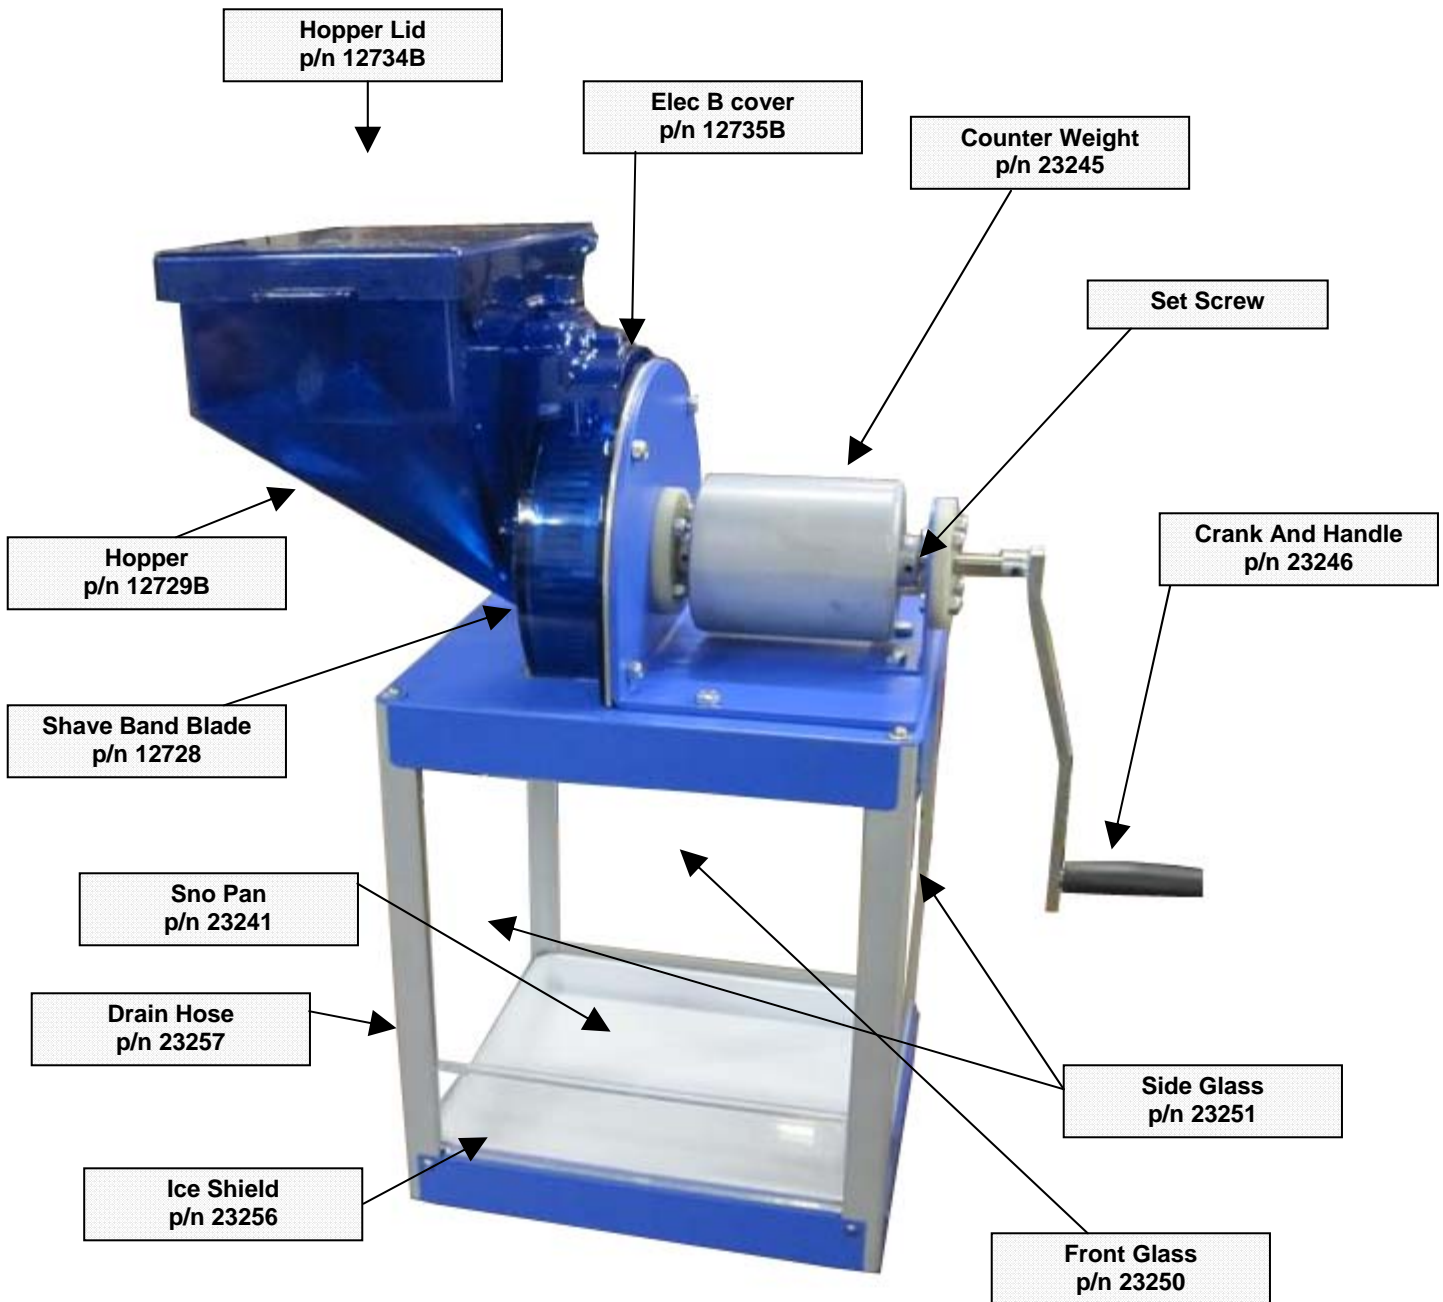

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY

10700 Medallion Drive

Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: 1-800-543-0862

Fax: 1-800-542-1496

© The text, descriptions, graphics and other material in this publication are the proprietary and exclusive property of Gold Medal Products Company and shall not be used, copied, reproduced, reprinted or published in any fashion, including website display, without its express written consent.